User Manual

IP CAMERA

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MISTURE.
DO NOT INSERT ANY METALLIC OBJECT THROUGH VENTILATION GRILLS.

CAUTION

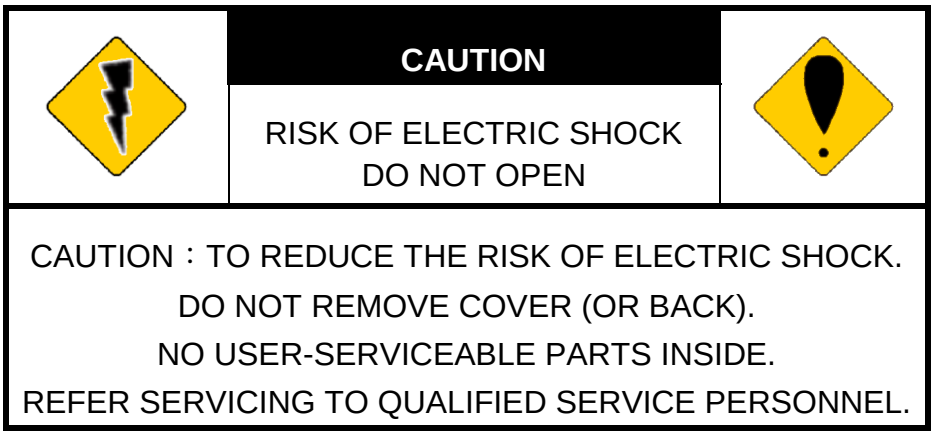
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION：TO REDUCE THE RISK OF ELECTRIC SHOCK.
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

COPYRIGHT

THE TRADEMARKS MENTIONED IN THE MANUAL ARE LEGALLY REGISTERED TO THEIR RESPECTIVE COMPANIES.

Content

I. PREFACE 4

II. PRODUCT SPECIFICATIONS 4

III. PRODUCT INSTALLATION 7

A. MONITOR SETTING 7
B. HARDWARE INSTALLATION 8
C. IP ASSIGNMENT 10
D. INSTALL ACTIVEX CONTROL: 13

IV. LIVE VIDEO 15

V. IP CAMARA CONFIGURATION 18

A. SYSTEM 19
B. NETWORK 22
C. A/V SETTING 32
D. EVENT LIST 38

VI. NETWORK CONFIGURATION 42

VII. I/O CONFIGURATION 42

VIII. FACTORY DEFAULT 48

IX. UNIVERSAL PASSWORD 48

X. PACKAGE CONTENTS 52

XI. MICRO SD CARD COMPATIBILITY 52

V1.0_20130710

I. Preface

This is a 1/4” CMOS 1.3MegaPixel IP camera with the web server built in. User can view real-time video via IE browser. It supports H.264, JPEG and MPEG4 video compression which provides smooth and high video quality. The video can be stored in the SD card and playback remotely.
With user friendly interface, it is an easy-to-use IP camera which is designed for security application.

II. Product Specifications

- HD 720P@30fps Real Time
- Mega-Pixel CMOS Sensor
- Digital Noise Reduction
- Digital Wide Dynamic Range
- Shutter Speed adjustable
- Sense Up adjustable
- Power over Ethernet
- H.264/ M-JPEG/ MPEG4 compression
- Micro SD card backup
- Support iPhone/Android/Mac
- SDK for Software Integration
- Free Bundle 36 ch recording software

Specifications

Hardware	
CPU	ARM 9 ,32 bit RISC
RAM	128MB
Flash	16MB
Image sensor	1 / 4” Mega-Pixel CMOS sensor
Sensitivity	Color : 1 Lux (AGC ON) B / W: 0.5 Lux (AGC ON)
Shutter Time	1 / 10 ~ 1 / 10,000 sec

Lens Type	4.2mm@F1.6
Audio	G.711/G.726(24Kbps/32kbps) audio compression Input : Built-in Mic Output : 3.5mm phone jack, Support 2-way audio
I/O	DI/DO
Angle of View	52.6°(H), 32.9°(V)
Power over Ethernet	Yes
Power	PoE Power consumption Max：2.88W
Operating Temperature	0°C ~ 45°C
Dimensions	φ 44x100mm
Weight	135g(IP camera), 255g (with bracket)
Network	
Ethernet	10/ 100 Base-T
Network Protocol	HTTP, HTTPS, SNMP, QoS/DSCP, Access list, IEEE 802.1X, RTSP, TCP/IP, UDP, SMTP, FTP, PPPoE, DHCP, DDNS, NTP, UPnP, 3GPP, SAMBA
System	
Video Resolution	1280x800@30fps,1280x720@30fps , 640x480@30fps, 320x240@30fps, 176x144@30fps
Video Adjust	Brightness, Contrast, Hue, Saturation, Sharpness, AGC, Shutter Speed adjustable, Sense-Up, D-WDR, Flip, Mirror, Noise reduction, Exposure
Triple Streaming	Yes
Image Snapshot	Yes
Full Screen Monitoring	Yes
Privacy Mask	Yes, 3 different areas
Compression Format	H.264/ M-JPEG/ MPEG4
Video Bitrates Adjust	CBR, VBR
Motion Detection	Yes, 3 different areas
Triggered Action	Mail, FTP, Save to SD card, DO, SAMBA
Security	Password protection, IP address filtering, HTTPS encrypted data transmission, 802.1X port-based

	authentication for network protection, QoS/DSCP
Firmware Upgrade	HTTP mode, can be upgraded remotely
Simultaneous Connection	Up to 10
Micro SD card management	
Recording Trigger	Motion Detection, IP check, Network break down (wire only),Schedule, DI
Video Format	AVI, JPEG
Video Playback	Yes
Delete Files	Yes
Web browsing requirement	
OS	Windows 7, 2000, XP, 2003, Microsoft IE 6.0 or above, Chrome, Safari, Firefox
Mobile support	iOS 4.3 or above, Android 1.6 or above
Hardware	
Suggested	Intel Dual Core 2.53G,RAM: 1024MB, Graphic card: 128MB

III. Product Installation

A. Monitor Setting

i. Right-Click on the desktop. Select “ Properties”

ii. Change color quality to highest (32bit).

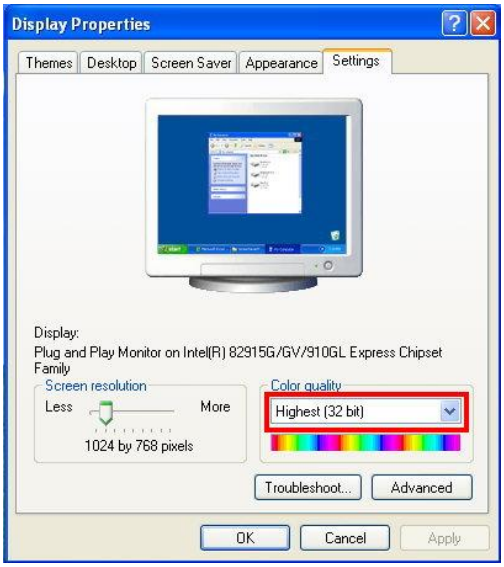

B. Hardware Installation

i. Install the IP Camera together with its mounting bracket as shown in the picture below.

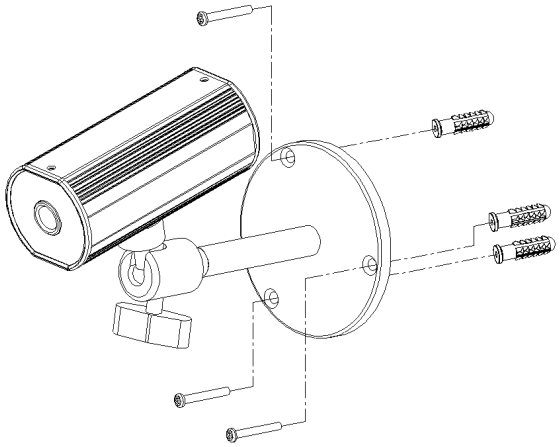

ii. Prepare a PoE switch.

iii. Connect the IP Camera to local network with Ethernet cable

iv. If there is not having PoE switch, please add PoE injector between IP camera and Ethernet switch.

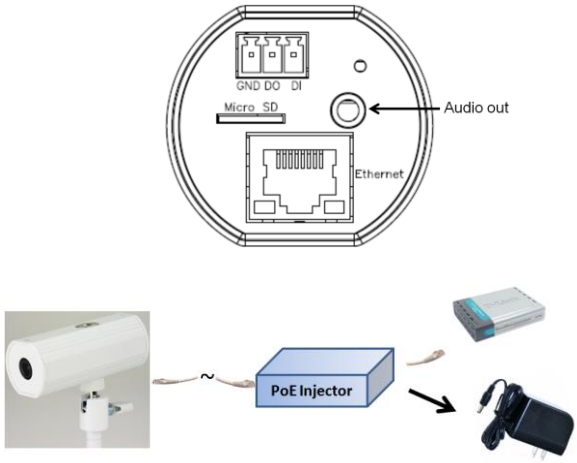

v. PoE (Power Over Ethernet)(Optional) **802.3af, 15.4W PoE Switch is recommended**

Power over Ethernet (PoE) is a technology that integrates power into a standard LAN infrastructure. It enables power to be provided to the network device, such as an IP phone or a network camera, using the same cable as that used for network connection. It eliminates the need for power outlets at the camera locations and enables easier application of uninterruptible power supplies (UPS) to ensure 24 hours a day, 7 days a week operation.

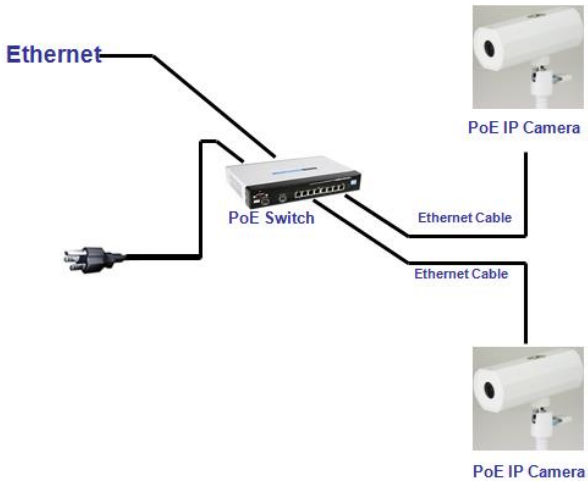

C. IP Assignment

i. Use the software, “IP Installer” to assign the IP address of IP CAMERA. The software is in the attached software CD.

ii. IP installer supports two languages
   a. IPInstallerCht.exe：Chinese version
   b. IPInstallerEng.exe：English version

iii. There are 3 kinds of IP configuration.
   a. Fixed IP (Public IP or Virtual IP)
   b. DHCP (Dynamic IP)
   c. Dial-up (PPPoE)

iv. Execute IP Installer

v. For Windows XP SP2 user, it may popup the following message box. Please click “Unblock”.

Windows Security Alert
To help protect your computer, Windows Firewall has blocked some features of this program.
Do you want to keep blocking this program?
Name: IPInstaller V2.1 Network Device Scan
Publisher: Unknown
Keep Blocking
Unblock
Ask Me Later
Windows Firewall has blocked this program from accepting connections from the Internet or a network. If you recognize the program or trust the publisher, you can unblock it. When should I unblock a program?

vi. IP Installer configuration:

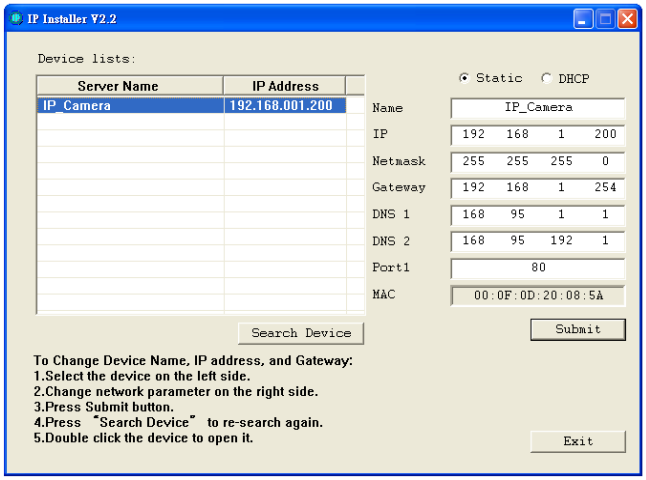

vii. IP Installer will search all IP Cameras connected on Lan. The user can click “Search Device” to search again.

viii. Click one of the IP Camera listed on the left side. The network configuration of this IP camera will show on the right side. You may change the “name” of the IP Camera to your preference (eg: Office, warehouse). Change the parameter and click “Submit” then click “OK”. It will apply the change and reboot the Device.

ix. Please make sure the subnet of PC IP address and IP CAM IP address are the same.

The same Subnet:

IP CAM IP address: 192.168.1.200

PC IP address: 192.168.1.100

Different Subnets:

IP CAM IP address: 192.168.2.200

PC IP address: 192.168.1.100

To Change PC IP address:

Control Panel→Network Connections→Local Area Connection Properties→Internet Protocol (TCP/IP) →Properties

Please make sure your IP Camera and PC have the same Subnet. If not, please change IP Camera subnet or PC IP subnet accordingly.

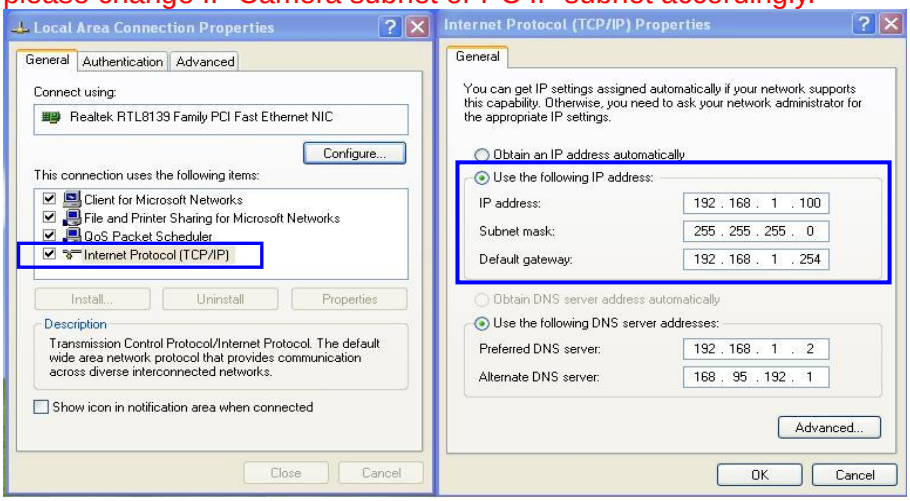
Local Area Connection Properties
General
Authentication
Advanced
Connect using:
Realtek RTL8139 Family PCI Fast Ethernet NIC
Configure...
This connection uses the following items:
Client for Microsoft Networks
File and Printer Sharing for Microsoft Networks
QoS Packet Scheduler
Internet Protocol (TCP/IP)
Install...
Uninstall
Properties
Description
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.
Show icon in notification area when connected
Close
Cancel
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 1 . 100
Subnet mask: 255 . 255 . 255 . 0
Default gateway: 192 . 168 . 1 . 254
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server: 192 . 168 . 1 . 2
Alternate DNS server: 168 . 95 . 192 . 1
Advanced...
OK
Cancel

x. A quick way to access remote monitoring is to left-click the mouse twice on a selected IP Camera listed on “Device list” of IP Installer. An IE browser will be opened.

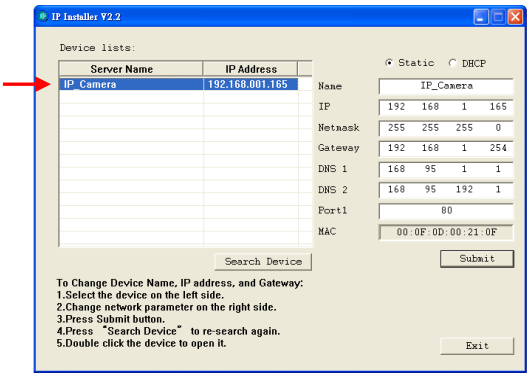

xi. Then, please key in the default “user name: admin” and “password: admin”.

D. Install ActiveX control:

For the first time to view the camera video via IE, it will ask you to install the ActiveX component.

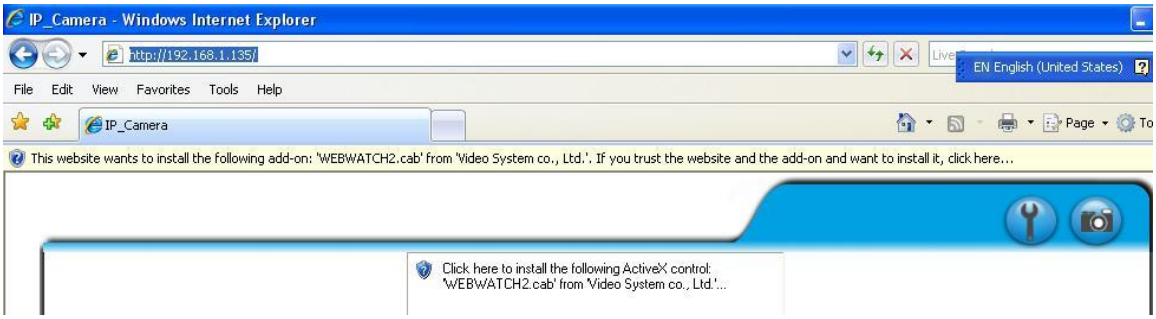
IP_Camera - Windows Internet Explorer
http://192.168.1.135/
EN English (United States)
File Edit View Favorites Tools Help
IP_Camera
Page
This website wants to install the following add-on: 'WEBWATCH2.cab' from 'Video System co., Ltd.'. If you trust the website and the add-on and want to install it, click here...
Click here to install the following ActiveX control:
'WEBWATCH2.cab' from 'Video System co., Ltd.'...

If the installation failed, please check the security setting for the IE browser.

i. IE → Tools → Internet Options… → Security Tab → Custom Level… → Security Settings → Download unsigned ActiveX controls→ Select "Enable" or Prompt.

ii. IE → Tools → Internet Options… → Security Tab → Custom Level… →Initialize and script ActiveX controls not marked as safe → Select "Enable" or Prompt.

1

2

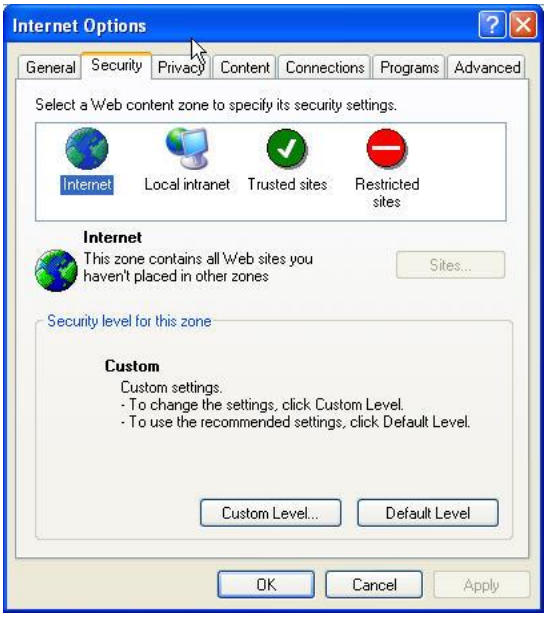

3

4

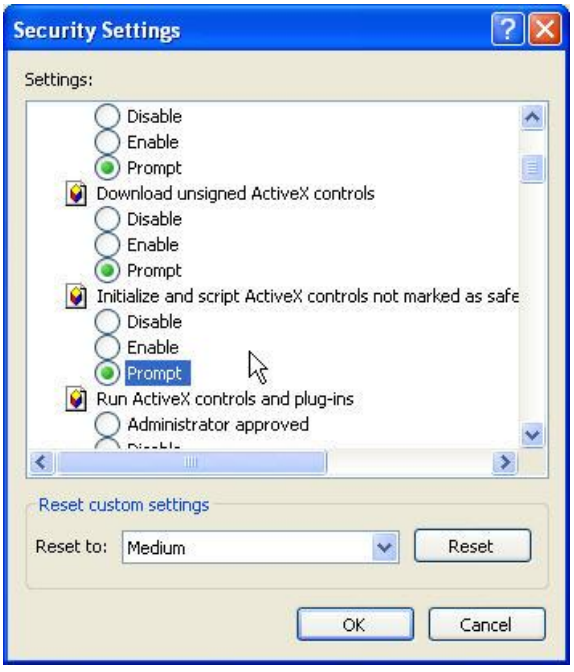

5

When popup the following dialogue box, click “Yes”.

IV. Live Video

Start a IE browser, type the IP address of the IP camera in the address field. It will show the following dialogue box. Key-in the user name and password. The default user name and password are “**admin**” and “**admin**”.

When connect to the IP CAMERA。The following program interface shows.

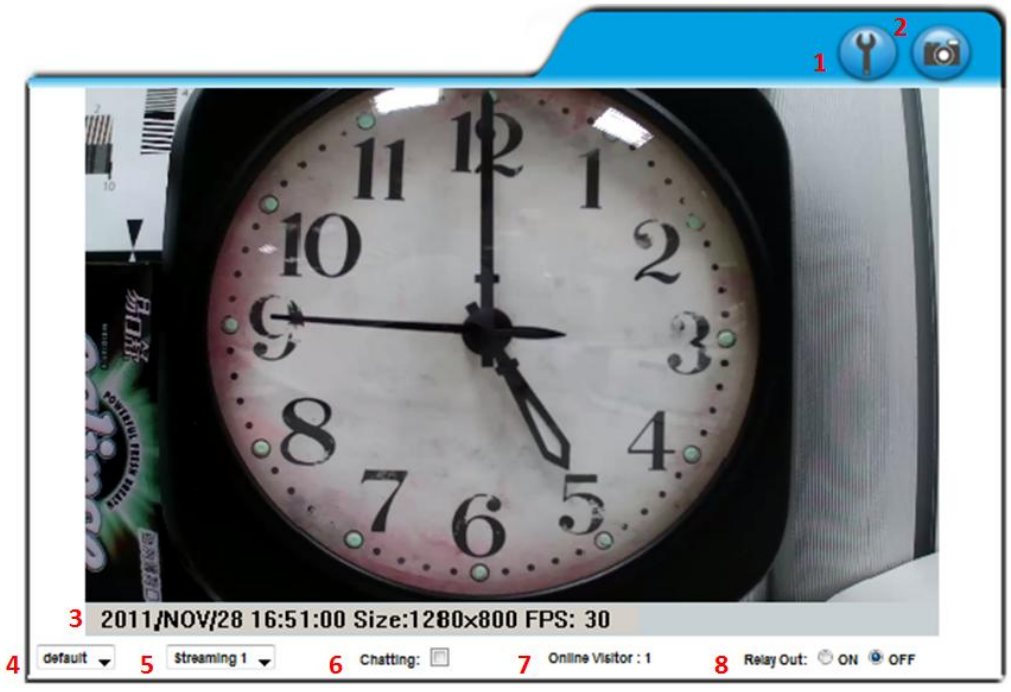

1. ：Get into the administration page

2. ：Video Snapshot

3. Show system time, video resolution, and video refreshing rate
4. Adjust image, 1/2x, 1x, 2x
5. Select video streaming source **(When streaming 2 setting in『Video Setting』 is closed, this function will not display)**
6. IP Camera supports 2-way audio. Click the “Chatting” check box. Then you can use microphone which connects to the PC to talk to server side, which is IP Camera side
7. Shows how many people connect to this IP camera
8. Control the relay which is connected to this camera

Double-click the video, it will change to full screen mode. Press “Esc” or double-click the video again, it will change back to normal mode.
Right-Click the mouse on the video, it will show a pop-up menu.

1. Snapshot：Save a JPEG picture
2. Record Start：Record the video in the local PC. It will ask you where to save the video. To stop recording, right-click the mouse again. Select “Record Stop”. The video format is AVI. Use Microsoft Media Player to play the recorded file.
3. Mute：Turn of the audio. Click again to turn on it.
4. Full Screen：Full-screen mode.
5. ZOOM: Enable zoom-in and zoom-out functions. Select “Enable digital zoom” option first within the pop-up dialogue box and then drag and drop the bar to adjust the zoom factors.

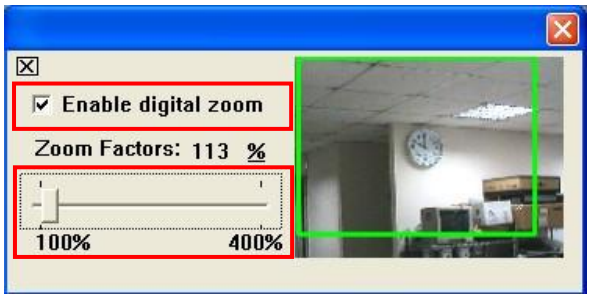
Enable digital zoom
Zoom Factors: 113 %
100%
400%

V. Configuration

Click to get into the administration page. Click to go back to the live video page.

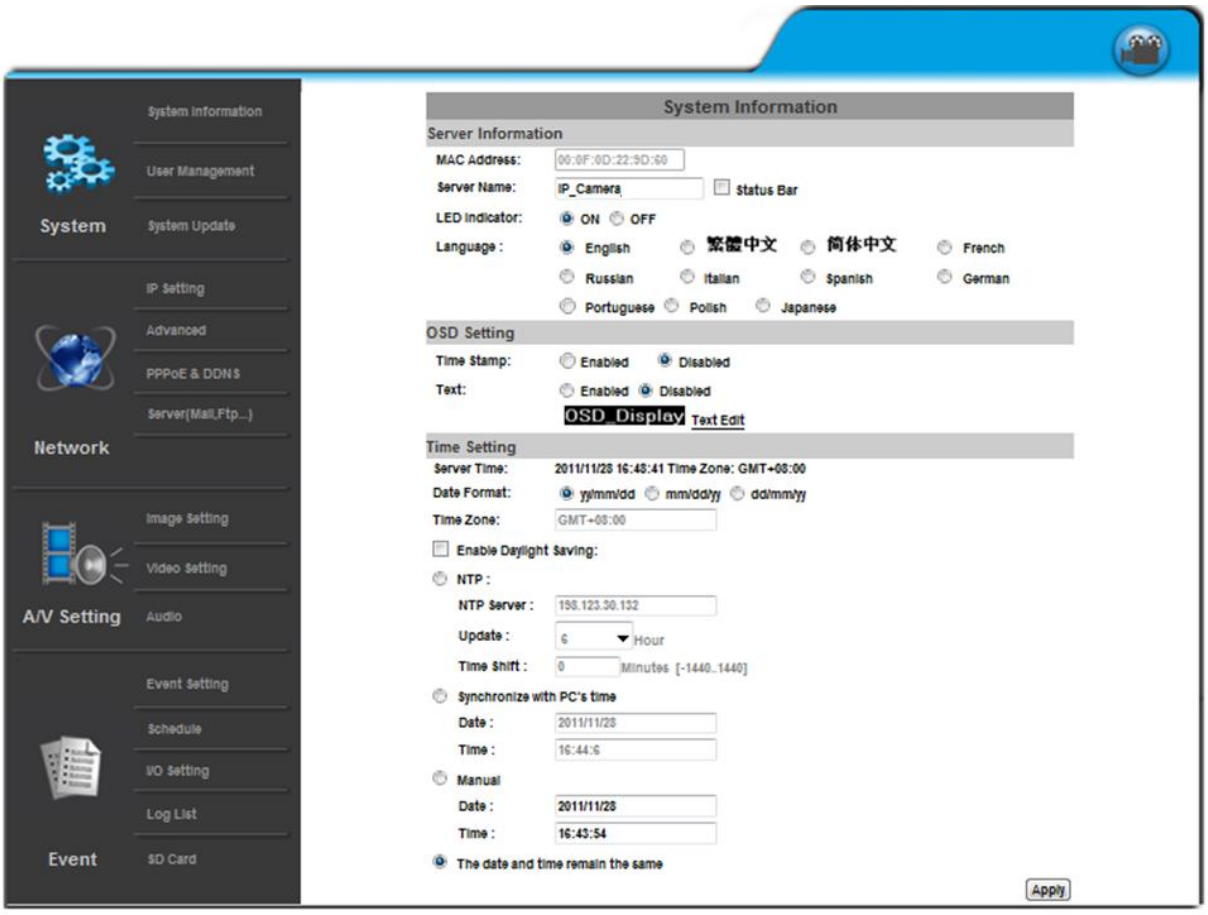

A.System

i、 System Information

a. Server Information: Set up the camera name, select language, and set up the camera time.

1. Server Name：This is the Camera name. This name will show on the IP Installer.
2. Select language：There are English, Traditional Chinese, and Simplified Chinese to select. When change, it will show the following dialogue box for the confirmation of changing language.

b. OSD Setting: Select a position where date & time stamp / text showing on screen.

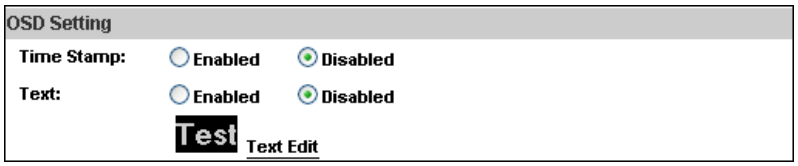

Moreover, click Text Edit can entry to adjust the OSD contents which is including Size and Alpha of text. Finally, click Upgrade button to reserve the setting.

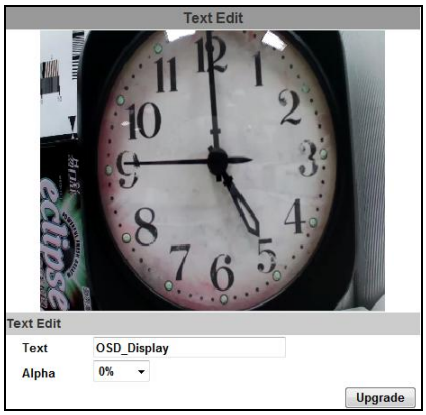

c. Server time setting：Select options to set up time - “NTP”, “Synchronize with PC’s time”, “Manual”, “The date and time remain

the same".

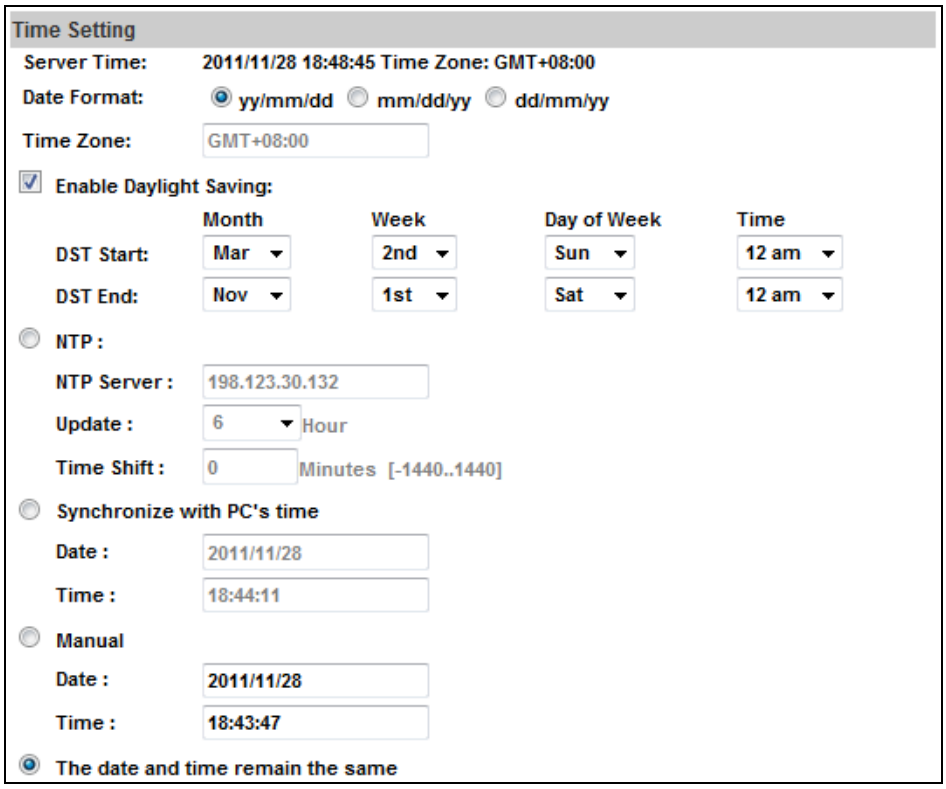

ii、 User Management

IP CAMERA supports three different users, administrator, general user, and anonymous user.

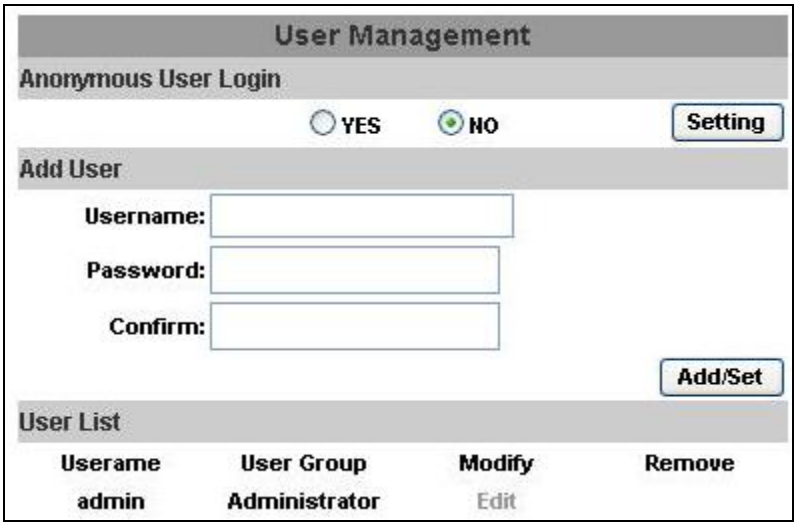

a. Anonymous User Login：

Yes：Allow anonymous login

No：Need user name & password to access this IP camera

b. Add user：

Type the user name and password, then click "Add/Set".

c. Click “edit” or “delete” to modify the user.

iii、 System update：

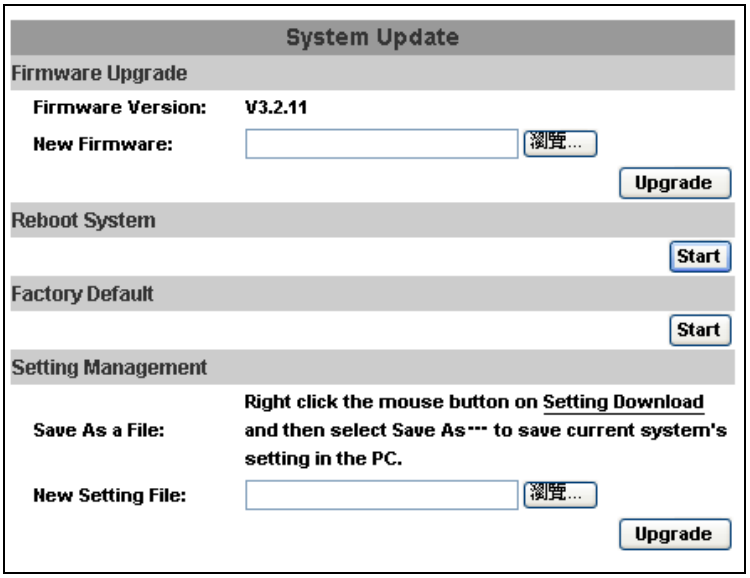

a. To update the firmware online, click “Browse…” to select the firmware. Then click “Upgrade” to proceed.

b. Reboot system：re-start the IP camera

c. Factory default：delete all the settings in this IP camera.

d. Setting Management：User may download the current setting to PC, or upgrade from previous saved setting.

1. Setting download:
   Right-click the mouse button on Setting Download → Select “Save AS…” to save current IP CAM setting in PC → Select saving directory → Save
2. Upgrade from previous setting
   Browse → search previous setting → open → upgrade → Setting update confirm → click **index.html**. to return to main page

B.Network

i、 IP Setting

IP Camera supports DHCP and static IP.

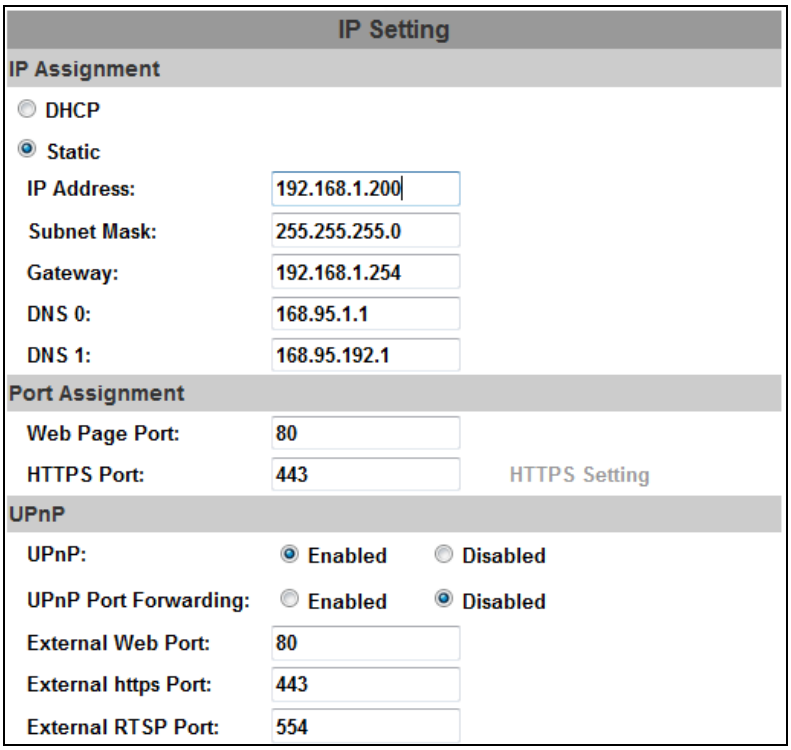

a. DHCP：Using DHCP, IP Camera will get all the network parameters automatically.

b. Static IP：Please type in IP address, subnet mask, gateway, and DNS manually.

c. Port Assignment: user may need to assign different port to avoid conflict when setting up IP assignment.

1. Web Page Port: setup web page connecting port and video transmitting port (Default: 80)
2. HTTPs Port: setup the https port(Default: 443)

d. UPnP

This IP camera supports UPnP, If this service is enabled on your computer, the camera will automatically be detected and a new icon will be added to “My Network Places.”

UPnP Port Forwarding：Enable UPnP Port Forwarding can access the Network Camera from the Internet, select this option to allow the Network Camera to open ports on the router automatically so

that video streams can be sent out from a LAN. There are three External port can be set, Web Port, Http Port and RTSP port. To utilize of this feature, make sure that your router supports UPnPTM and it is activated.

Note: *UPnP must be enabled on your computer.*

Please follow the procedure to activate UPnP

1. *open the* ***Control Panel*** *from the* ***Start Menu***
2. *Select* ***Add/Remove Program****s*
3. *Select* ***Add/Remove Windows Components*** *and open* ***Networking Services*** *section*
4. *Click* ***Details*** *and select* ***UPnP*** *to setup the service*
5. *The IP device icon will be added to "MY Network Places"*
6. *User may double click the IP device icon to access IE browser*

e. RTSP setting

1. RTSP Server: enable or disable
2. RTSP Port: setup port for RTSP transmitting (Default: 554)
3. RTP Start and End Port: in RTSP mode, you may use TCP and UDP for connecting. TCP connection uses RTSP Port (554). UDP connection uses RTP Start and End Port.

ii、 Advanced：

a. Https (Hypertext Transfer Protocol Secure)：Https can help protect streaming data transmission over the internal on the higher security level.

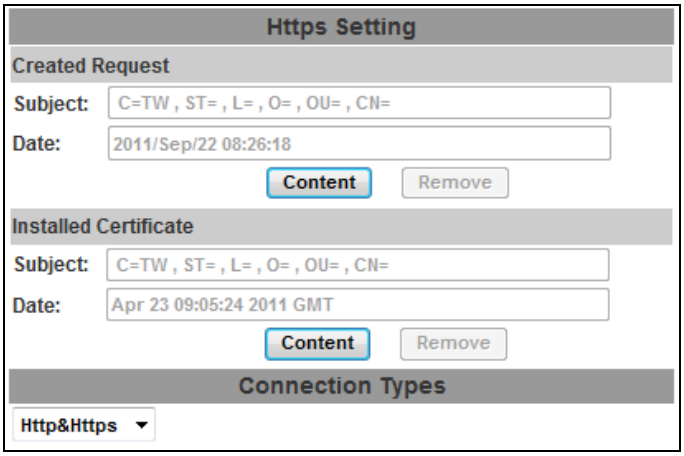

Https setting：Before setting new request, please remove old secure identification at Http connection type.

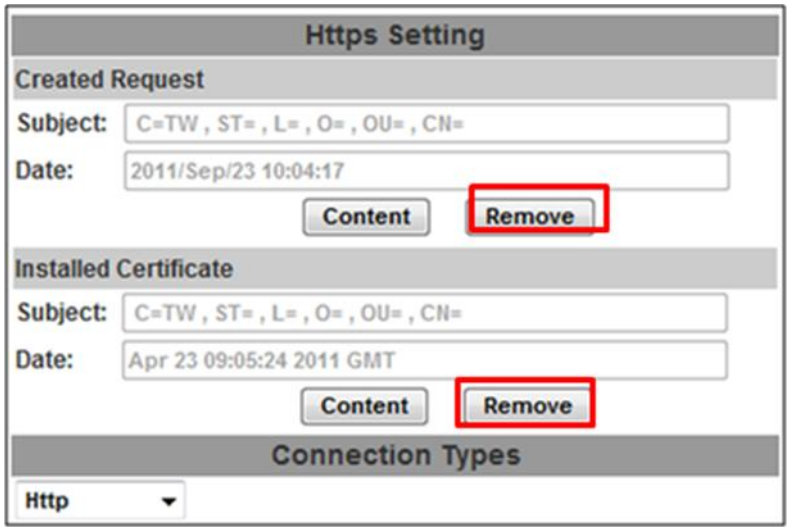

1. Created Request: remove secure identification in Created request mode. There is a warning message showing. Please set “Yes” to remove secure identification.
2. Setting the secure identification and apply it.

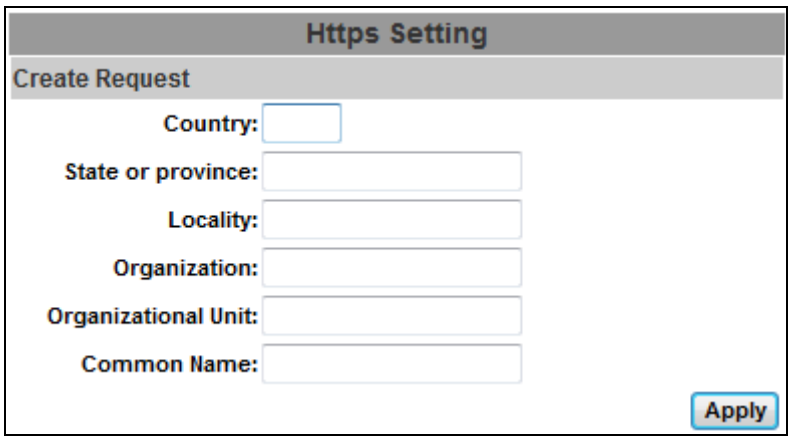

3. Installed Certificate: remove Certificate in .Installed Certificate mode. There will be a warning message to check again.
4. There are two ways to set Certificate- Install Signed Certificate and Create Self-Signed Certificate.

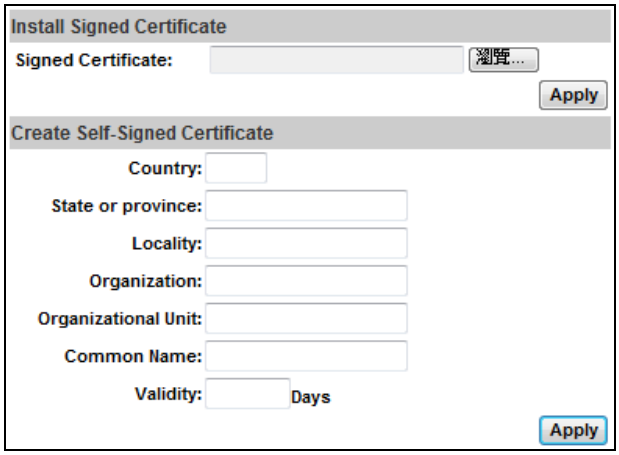

b. SNMP(Simple Network Management Protocol)：

1. Enable SNMPv1 or SNMPv2 and write the name of Write Community and Read Community.
2. Enable SNMPv3, please set Security Name, Authentication Type, Authentication Password, Encryption Type, Encryption Password of Write mode and Read mode.
3. Enable SNMPv1/SNMPv2 Trap can detect the Trap server. Please set what event need to detect.

c. Access list：”Enable IP address filter” can set IP address which can allow or deny to this camera. There are two options, single and range, for user to set the IP address.

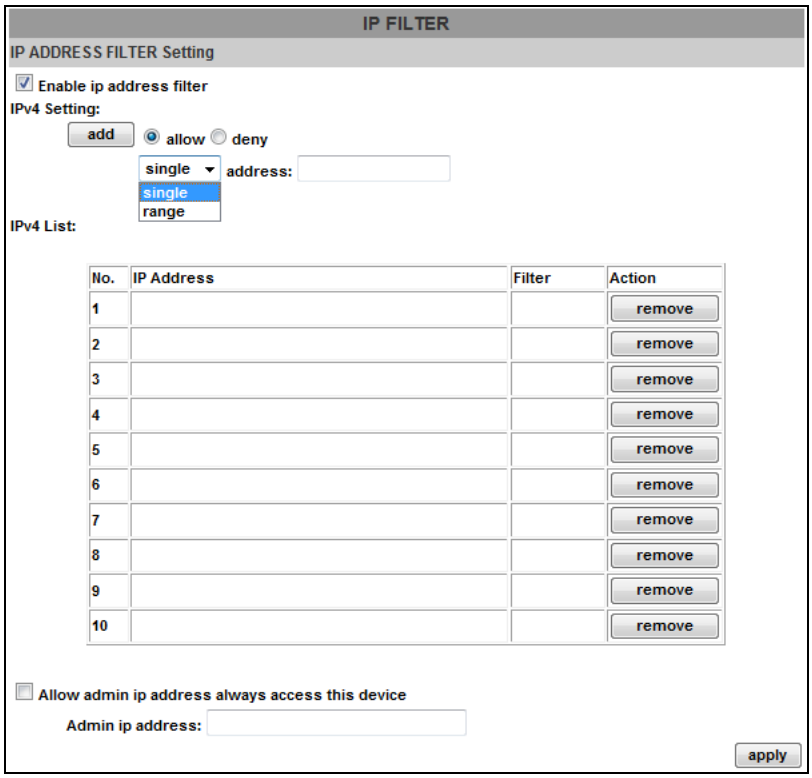

d. QoS/DSCP(Quality of Server/Differentiated Services Code-point)：
DSCP specifies a simple mechanism for classifying and managing network traffic and provide QoS on IP networks. DSCP is a 6-bit in the IP header for packet classification purpose. Please define the reserve for Live Stream, Event / Alarm and Management.

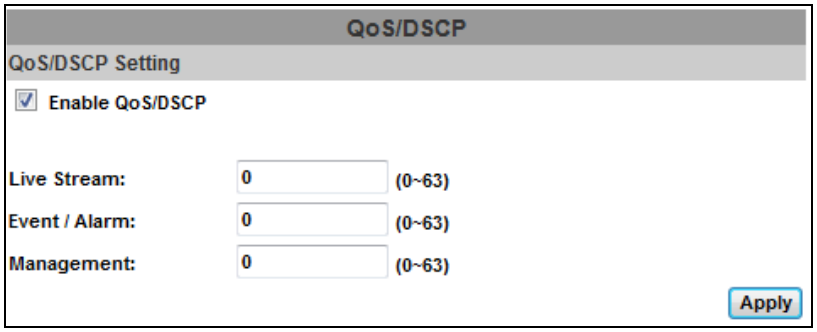

e. IEEE 802.1x：
IEEE 802.1x is an IEEE standard for port-based Network Access Control. It provides an authentication mechanism to device wishing to attach to a LAN or WLAN.
The EAPOL protocol support service identification and optional point to point encryption over the local LAN segment.

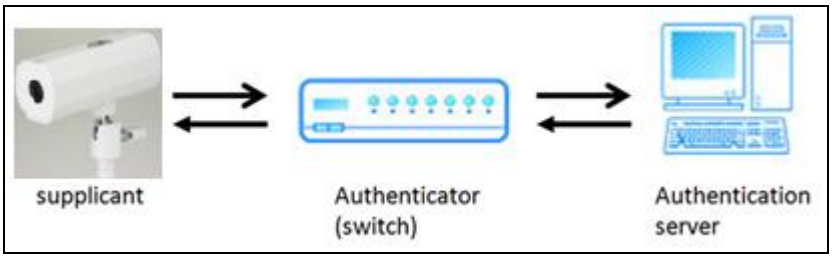

Please check what version of the authenticator and authentication server support. This camera supports EAP-TLS method. Please enter ID, password issued by the CA, then upload related certificates.

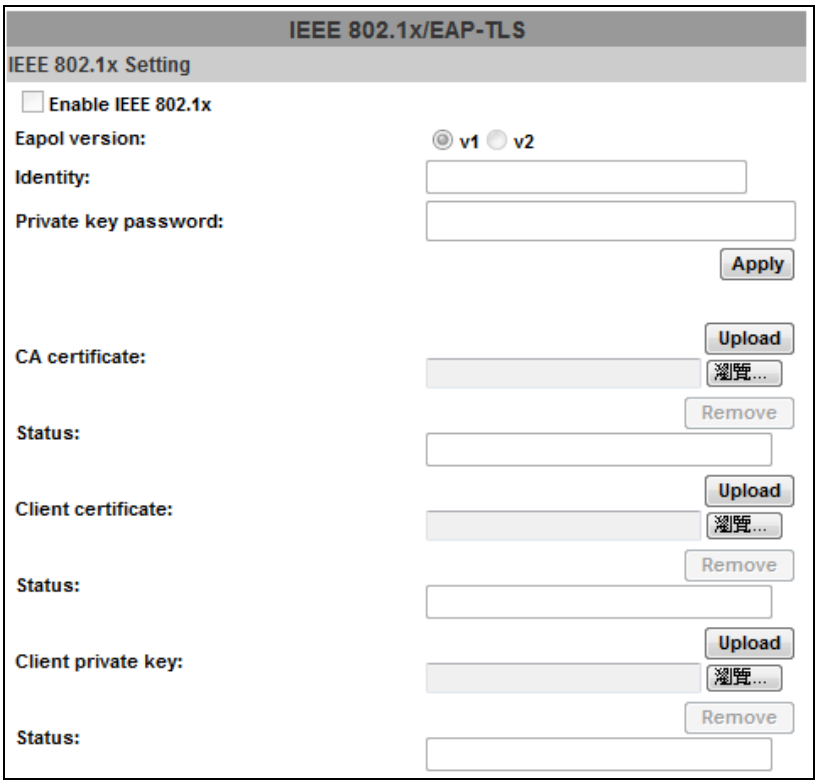

iii、 PPPoE & DDNS：

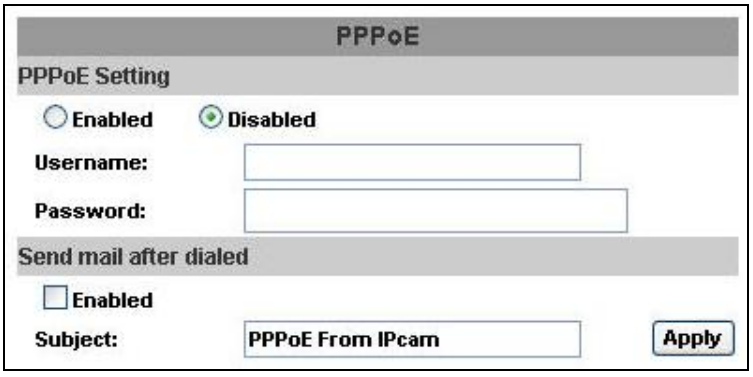

a. PPPoE：Select “Enabled” to use PPPoE. Key-in Username and

password for the ADSL connection. Send mail after dialed：When connect to the internet, it will send a mail to a specific mail account. For the mail setting, please refer to “Mail and FTP” settings.

b. DDNS：

It supports DDNS (Dynamic DNS) service.

1. DynDNS：

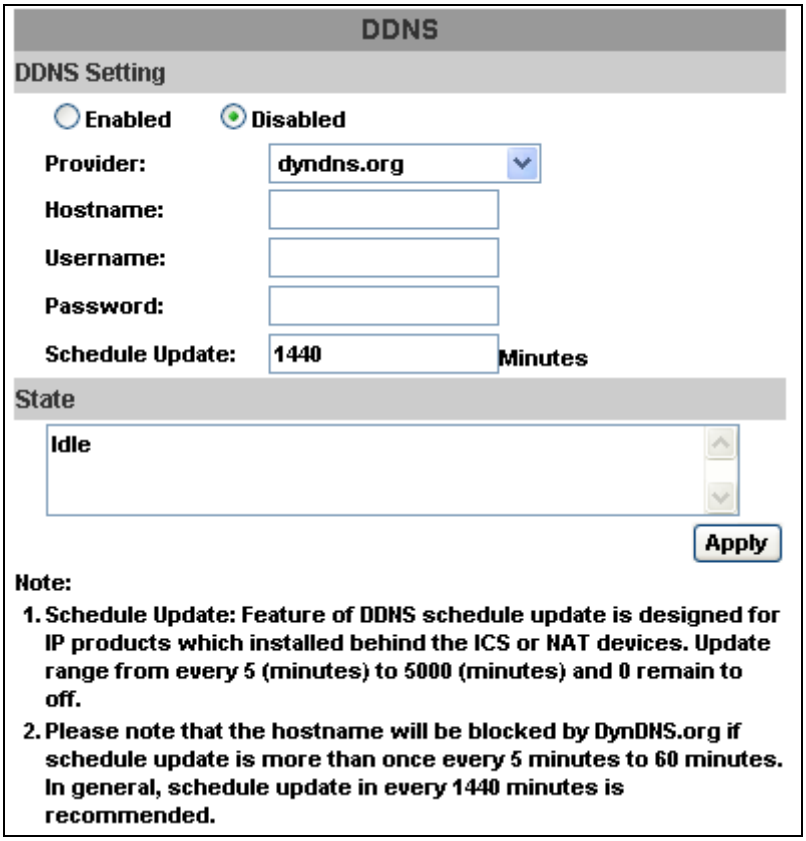
DDNS
DDNS Setting
Enabled
Disabled
Provider:
dyndns.org
Hostname:
Username:
Password:
Schedule Update:
1440
Minutes
State
Idle
Apply
Note:
1. Schedule Update: Feature of DDNS schedule update is designed for IP products which installed behind the ICS or NAT devices. Update range from every 5 (minutes) to 5000 (minutes) and 0 remain to off.
2. Please note that the hostname will be blocked by DynDNS.org if schedule update is more than once every 5 minutes to 60 minutes. In general, schedule update in every 1440 minutes is recommended.

(1) Enable this service

(2) Key-in the DynDNS server name, user name, and password.

(3) Set up the IP Schedule update refreshing rate.

(4) Click “Apply”

(5) If setting up IP schedule update too frequently, the IP may be blocked. In general, schedule update every day (1440 minutes) is recommended

2. Camddns service：

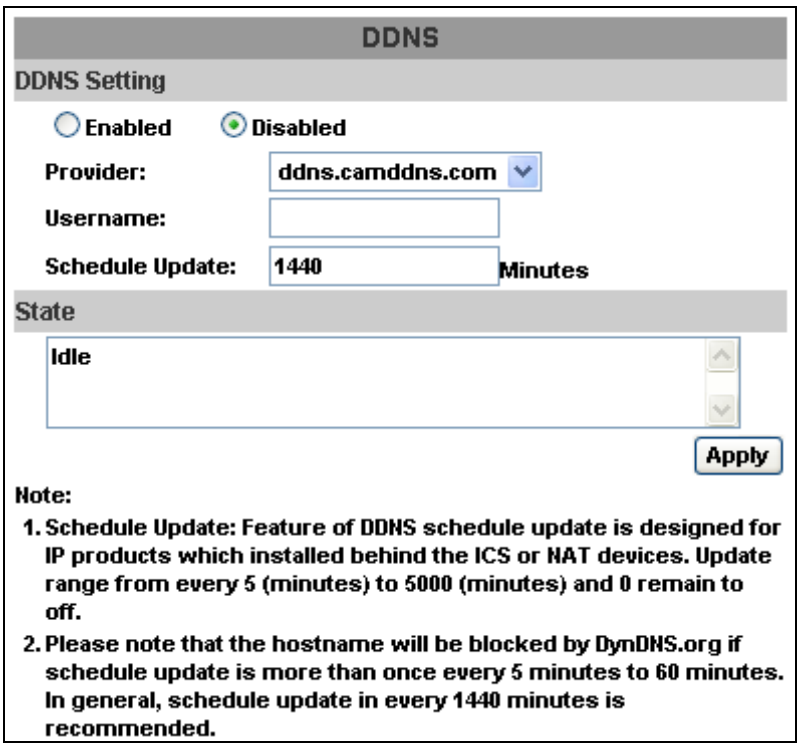
DDNS
DDNS Setting
Enabled
Disabled
Provider:
ddns.camddns.com
Username:
Schedule Update:
1440
Minutes
State
Idle
Apply
Note:
1. Schedule Update: Feature of DDNS schedule update is designed for IP products which installed behind the ICS or NAT devices. Update range from every 5 (minutes) to 5000 (minutes) and 0 remain to off.
2. Please note that the hostname will be blocked by DynDNS.org if schedule update is more than once every 5 minutes to 60 minutes. In general, schedule update in every 1440 minutes is recommended.

1. Please enable this service
2. Key-in user name.
3. IP Schedule update is default at 5 minutes
4. Click “Apply”.
3. DDNS Status
   (1) Updating：Information update
   (2) Idle：Stop service
   (3) DDNS registration successful, can now log by http://<username>.ddns.camddns.com：Register successfully.
   (4) Update Failed, the name is already registered：The user name has already been used. Please change it.
   (5) Update Failed, please check your internet connection：Network connection failed.
   (6) Update Failed, please check the account information you provide：The server, user name, and password may be wrong.

iv、 Server setting

There are three choices of server types available: Email, FTP and SAMBA. Select the item to display the detailed configuration options. You can configure either one or all of them.

To send out the video via mail of ftp, please set up the configuration first.

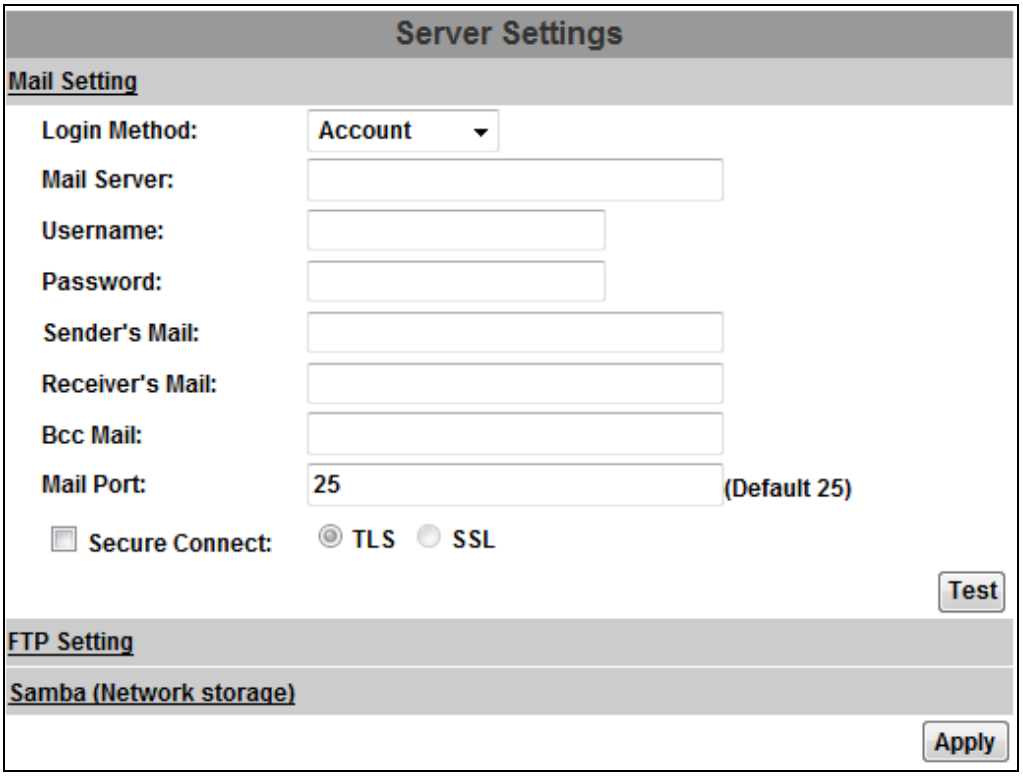

FTP

To send out the video via mail of ftp, please set up the configuration first.

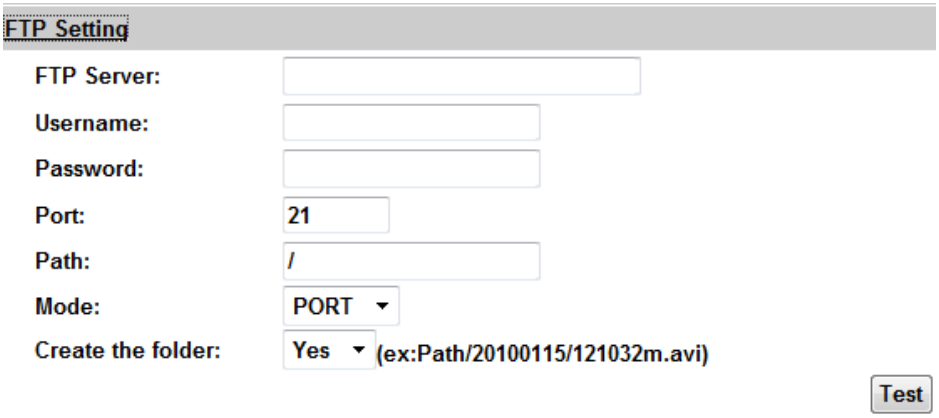

Samba

Select this option to send the media files via a network neighborhood when an event is triggered

Samba (Network storage)

Location:		(ex:\\Nas_ip\folder)
Workgroup:		
Username:		
Password:		
Create the folder:	Yes	(ex:Path/20100115/121032m.avi)

Test

C.A/V Setting

i、 Image Setting

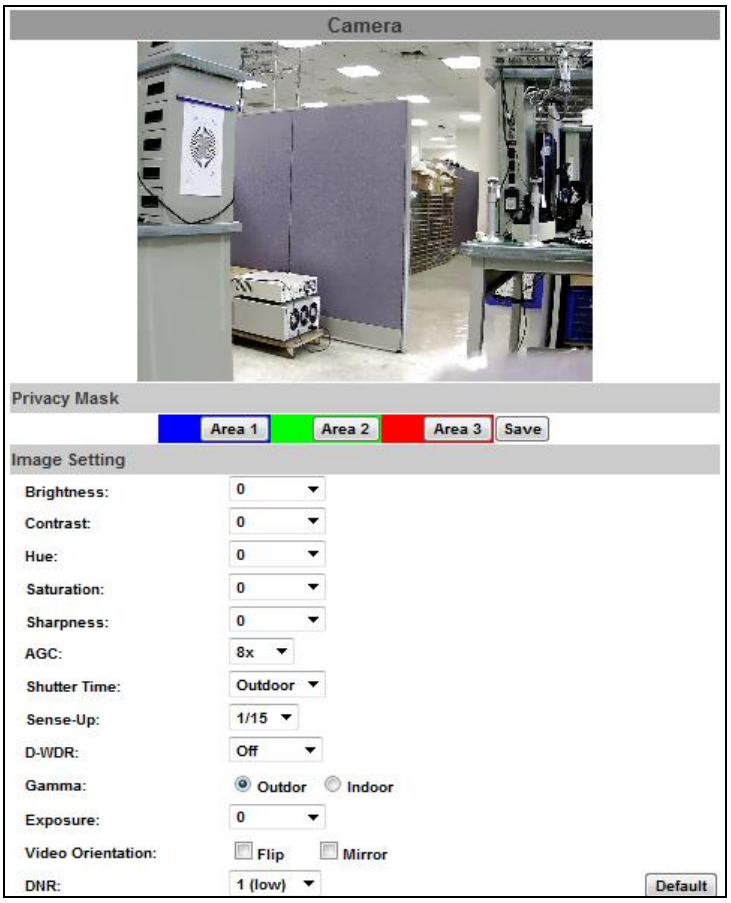

For the security purpose, there are three areas can be setup for privacy mask. Click Area button first and pull a area on the above image. Finally, click Save button to reserve the setting.

Adjust “Brightness”, “Contrast”, “Saturation” , “Exposure”, “Sharpness” to get clear video. Moreover, IP CAMERA supports “AGC”, “Shutter Time”, “D-WDR”, “Noise reduction” and “Video Orientation”

ii、 Video Setting

User may select the camera system type,

Streaming 1 Setting: Basic mode and Advanced mode

Streaming 2 Setting: Basic mode, Advanced mode, and 3GPP mode

(Max Video Frame Rate for both streaming combined is 30 FPS)

a. Streaming 1 Basic Mode：

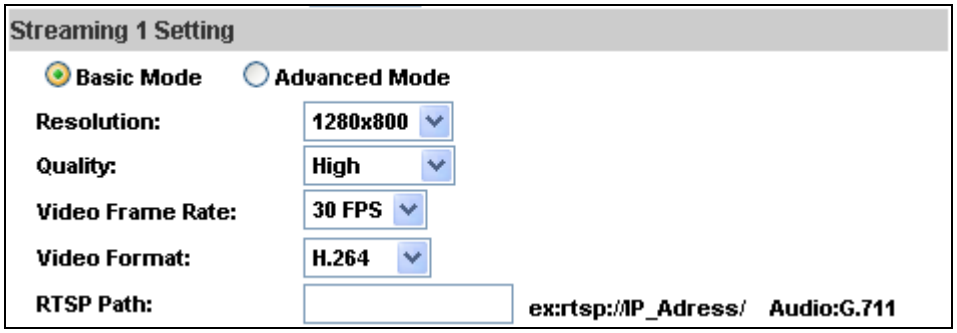

1. Resolution：
   There are 5 resolutions can be chosen.
   1280x800@30fps, 1280x720@30fps, 640x480@30fps, 320x240@30fps, 176x144@30fps
2. Quality：
   There are 5 levels to adjust:
   Best/ High/ Standard/ Medium/ Low
   The higher the quality is, the bigger the file size is. Also not good for internet transmitting
3. Video Frame Rate：The video refreshing rate per second.
4. Video Format：H.264, MPEG4 or M-JPEG
5. RTSP Path: RTSP output name

b. Streaming 1 Advanced Mode：

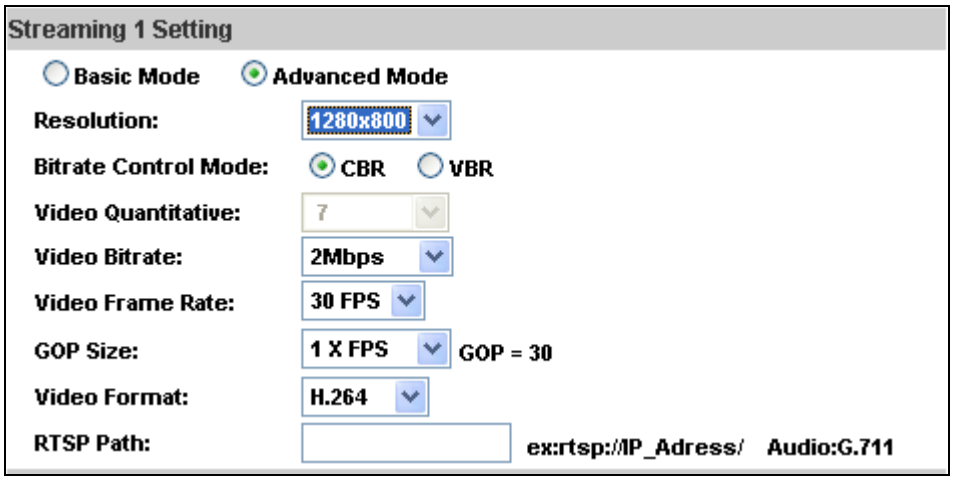

1. Resolution：
   There are 5 resolutions can be chosen.
   1280x800, 1280x720, 640x480, 320x240, 176x144
2. Bitrate Control Mode
   There are CBR〔Constant Bit Rate〕 and VBR〔Variable Bit Rate〕to use.
   CBR：32Kbps~8Mbps (the higher the CBR is, the better the video quality is)
   VBR：1(Low)~10(High) – Compression rate, the higher the compression rate, the lower the picture quality is; vise versa. The balance between VBR and network bandwidth will affect picture quality. Please carefully select the VBR rate to avoid picture breaking up or lagging.
3. Video Frame Rate
   The video refreshing rate per second.
4. GOP Size
   It means "Group of Pictures". The higher the GOP is, the better the quality is.
5. Video Format：H.264, MPEG4 or M-JPEG
6. RTSP Path: RTSP output connecting route

c. Streaming 2 Basic Mode：

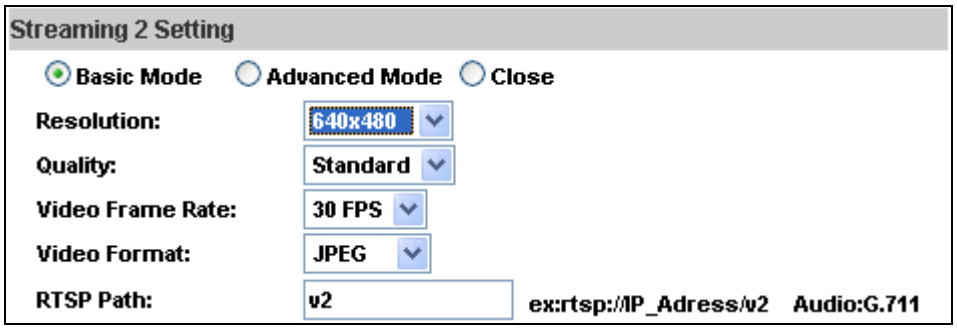

1. Resolution：
   There are 5 resolutions can be chosen.
   1280x800, 1280x720, 640x480, 320x240, 176x144
2. Quality：
   There are 5 levels to adjust:
   Best/ High/ Standard/ Medium/ Low
   The higher the quality is, the bigger the file size is. Also not good for internet transmitting
3. Video Frame Rate：The video refreshing rate per second.
4. Video Format：H.264, MPEG4 or M-JPEG
5. RTSP Path: RTSP output connecting route

d. Streaming 2 Advanced Mode：

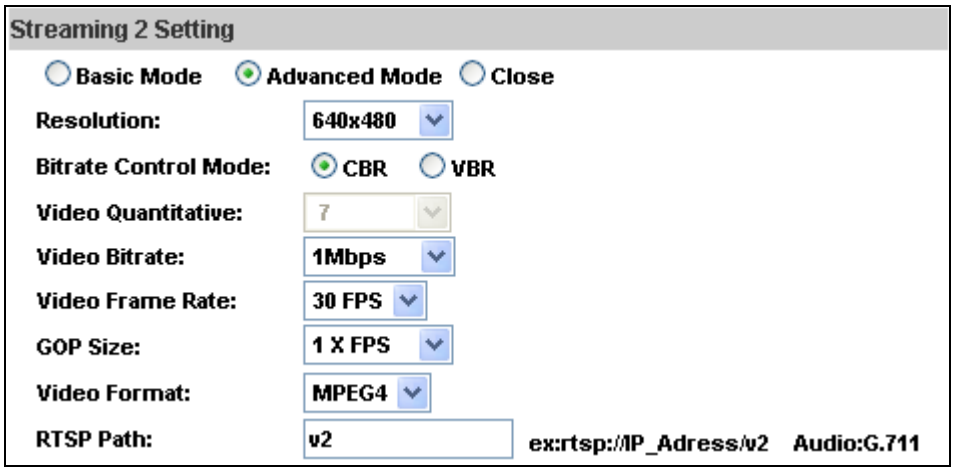

1. Resolution：
   There are 5 resolutions can be chosen.
   1280x800, 1280x720, 640x480, 320x240, 176x144
2. Quality：
   There are 5 levels to adjust:
   Best/ High/ Standard/ Medium/ Low
   The higher the quality is, the bigger the file size is. Also not

good for internet transmitting

3. Video Frame Rate：The video refreshing rate per second.
4. Video Format：H.264, MPEG4 or M-JPEG
5. RTSP Path: RTSP output connecting route

e. 3GPP Streaming mode:

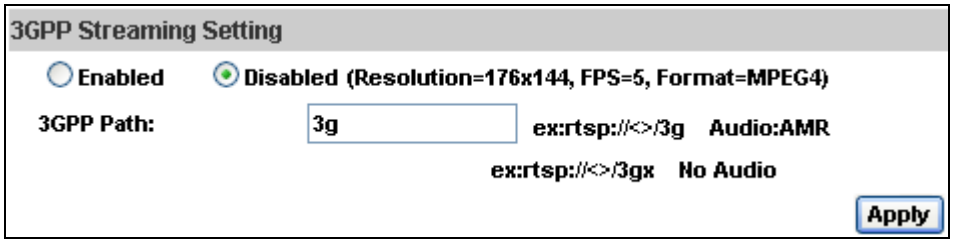

3GPP mode suggested setting: 176x144 resolution, 5FPS, MPEG4 format

1. Enable or Disable 3GPP Streaming
2. 3GPP: 3GPP output name

iii、 Audio：

IP CAMERA supports 2-way audio. User can send audio from IP Camera Built-in mic to remote PC; User can also send audio from remote PC to IP Camera's external speaker.

a. Audio from IP camera built-in mic to local PC: select "Enable" to start this function and also can select the audio type.

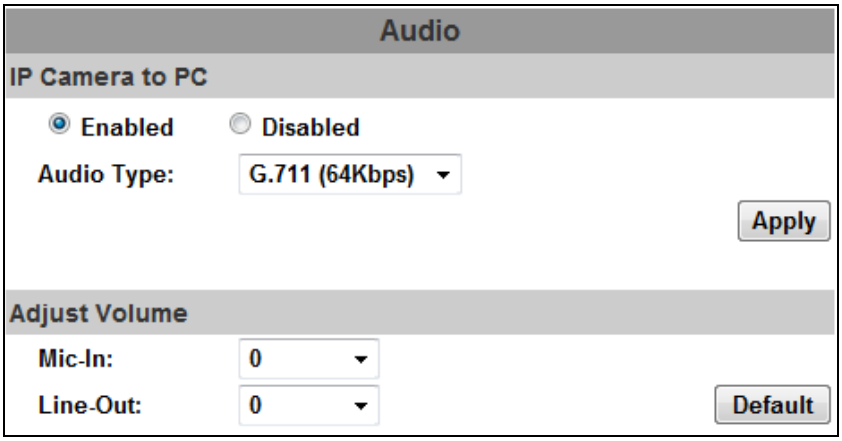

b. Audio from local PC to IP Camera: Check "chatting" in the browsing page.

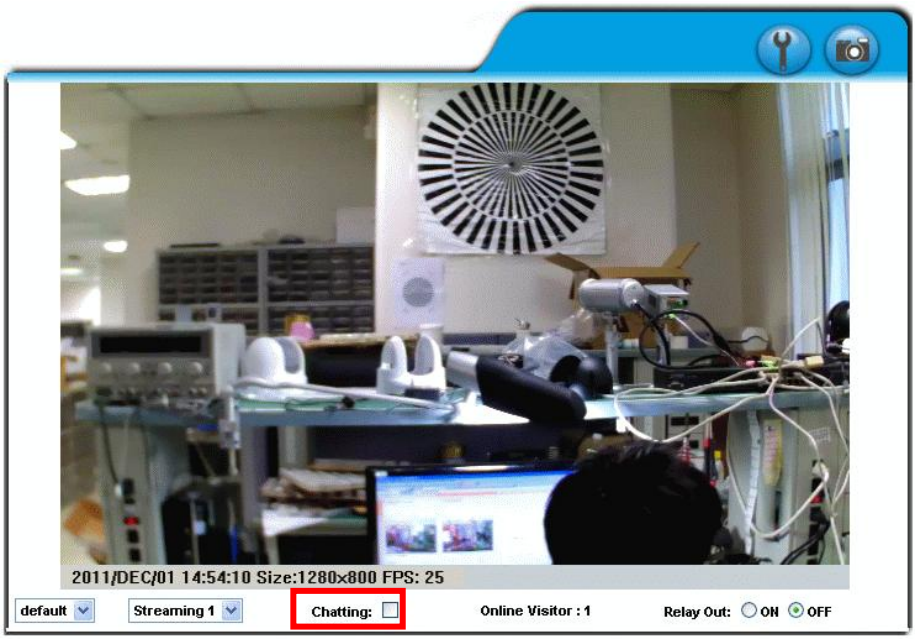

The Audio will not be smooth when enable SD card recording function simultaneously.

D.Event List

IP CAMERA provides multiple event settings.

i、 Event Setting

a. Motion Detection：

IP CAMERA allows 3 areas motion detection. When motion is triggered, it can send the video to some specific mail addresses, transmit the video to remote ftp server, trigger the relay, and save video to local SD card. To set up the motion area, click “Area Setting”. Using mouse to drag and draw the area. The same operation for area 2 and 3.

b. Record File Setting: IP CAMERA allows 3 different types of recording file to change its record size.

When motion/alarm is triggered, there are 3 different types of record mode.

1. AVI File (With Record File Setting)
2. Multi-JPEG (With Record File Setting), only with JPEG compression format.
3. Single JPEG (Single File with Interval Setting)

c. Record Time Setting：

Pre Alarm and Post Alarm setups for video start and end time when motion detected, I/O, or other devices got triggered.

Note: Pre/Post Alarm record time is base on record time setting and IP Cam built-in Ram memory. Limited by IP Cam built-in Ram Memory, When information is too much or video quality set too high, it will cause recording frame drop or decrease on post alarm recording time.

d. Network Dis-connected：

IP Camera will scan ones per second. Image will be record to SD card after IP Camera detect network dis-connected, if set “Save to SD card”.

e. Network IP check

After enable IP Check, IP camera can check network server connecting. If IP camera check fail, image will record image to SD card.

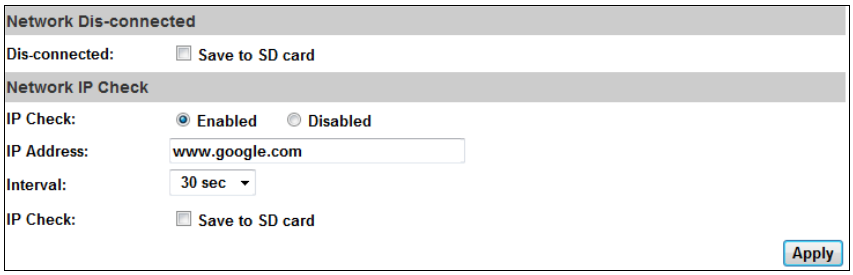

ii、 Schedule

a. Schedule: After complete the schedule setup, the camera data will be recorded according to the schedule setup.

b. Snapshot: After enable the snapshot function, user can select the storage position of snapshot file, the interval time of snapshot and the reserved file name of snapshot.

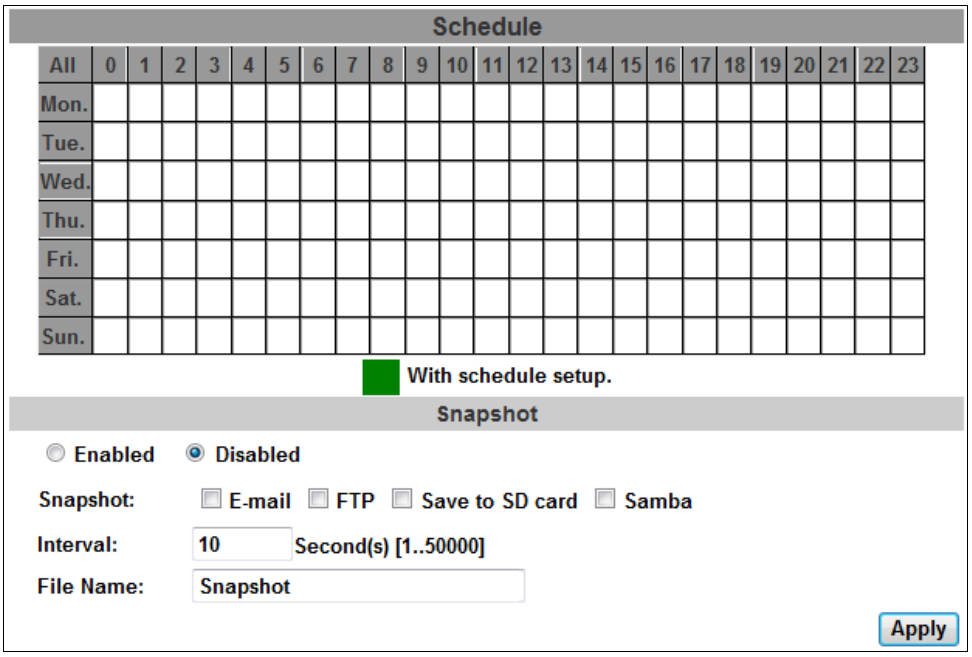
Schedule
All 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Mon.
Tue.
Wed.
Thu.
Fri.
Sat.
Sun.
With schedule setup.
Snapshot
Enabled
Disabled
Snapshot:
E-mail
FTP
Save to SD card
Samba
Interval:
10
Second(s) [1..50000]
File Name:
Snapshot
Apply

iii、 Log List

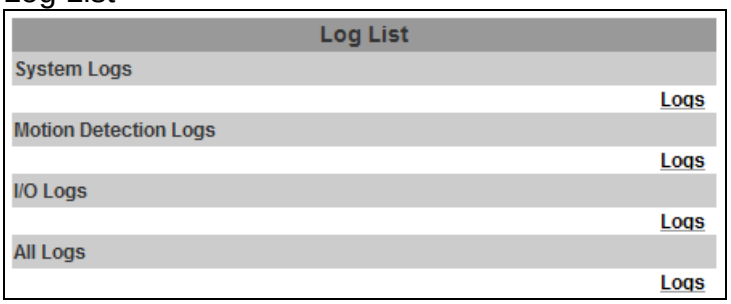

Sort by System Logs, Motion Detection Logs and I/O Logs. In addition, System Logs and I/O Logs won't lose data due to power failure.

iv、 SD card

Choose "The 1st day" meads the recoding file will be keep one day. Example: It is five o'clock now. Choose "The 1st day". The files will be kept from five o'clock yesterday to five o'clock today.

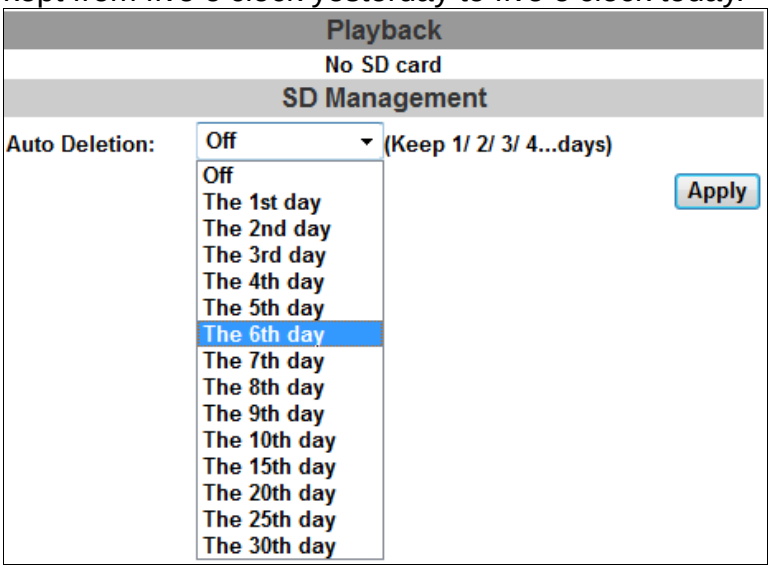

VI. Network Configuration

i、 Configuration 1：

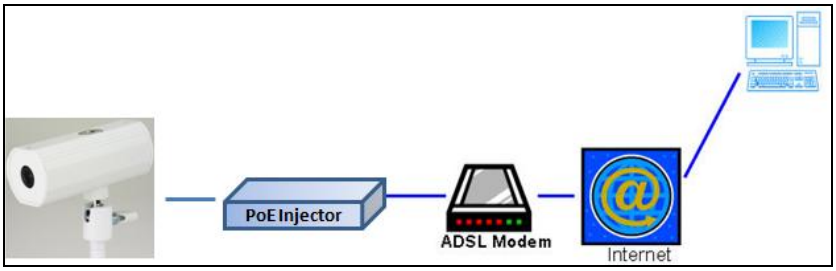

a. Internet Access：ADSL or Cable Modem
b. IP address：One real IP or one dynamic IP
c. Only IP CAMERA connects to the internet
d. For fixed real IP, set up the IP into IP CAMERA. For dynamic IP, start PPPoE.

ii、 Configuration 2：

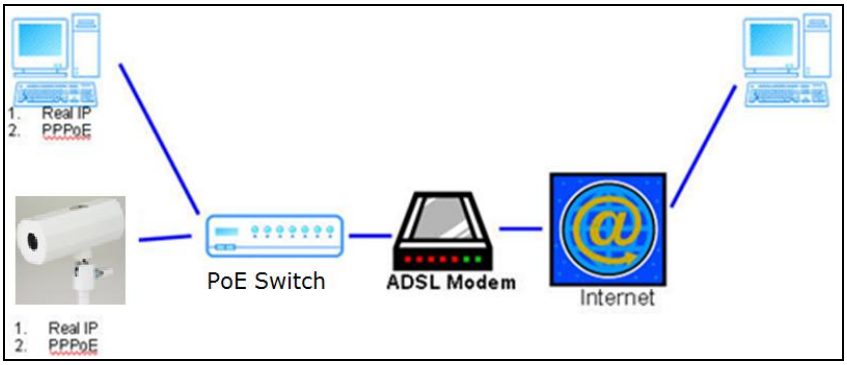

a. Internet Access：ADSL or Cable Modem
b. IP address：More than one real IP or one dynamic IP
c. IP CAMERA and PC connect to the internet
d. Device needed：Switch Hub
e. For fixed real IP, set up the IP into IP CAMERA and PC. For dynamic IP, start PPPoE.

iii、 Configuration 3：

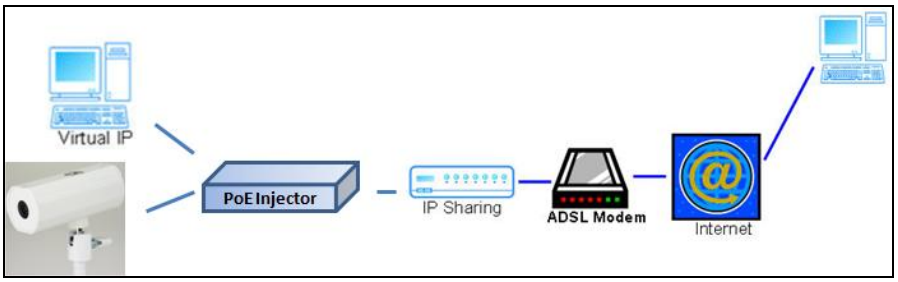

a. Internet Access：ADSL or Cable Modem
b. IP address：one real IP or one dynamic IP
c. IP CAMERA and PC connect to the internet
d. Device needed：IP sharing
e. Use virtual IP, set up port forwarding in IP sharing.

VII. I/O Configuration

1. I/O Connection

a. Please connect the G & AO pin to the external relay (buzzer) device

b. Please connect the G & A-I pin to the external trigger device.

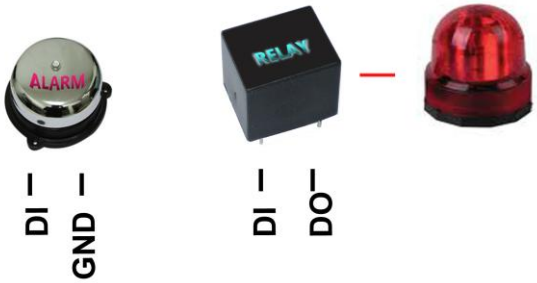

c. I/O PIN definition

- GND (Ground)
- DO (Digital Output): DC 5V, initial state is High
- DI (Digital Input, **DI**): Max. 50mA, DC 5V, initial state is High

When no event happens, DO output is 5V (DO and GND are disconnected). When the camera detects event happening and triggers external alarm, DO output is 0V (DO and GND are connected).

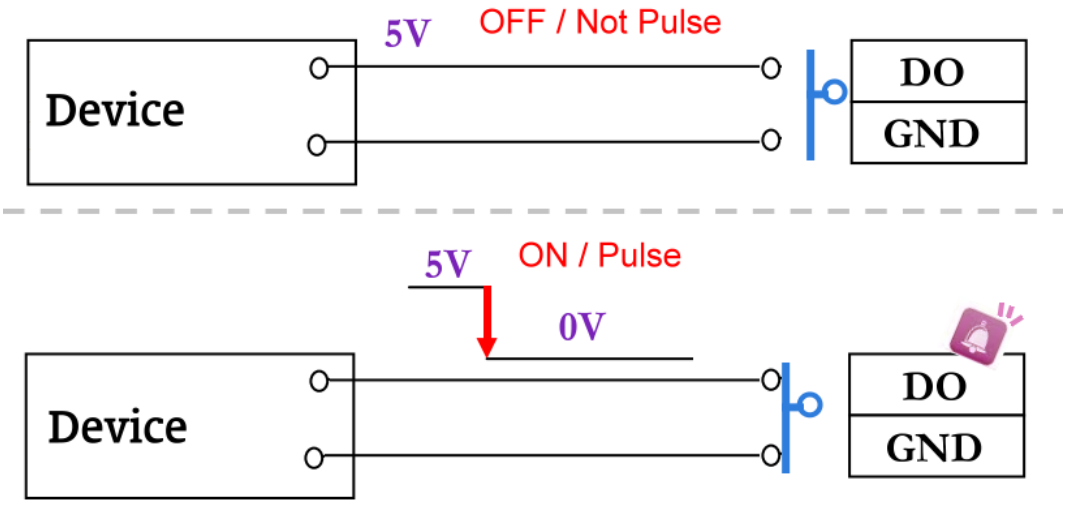

If you select "N.O" in "Input sensor setting", when external device or circuit makes DI and GND pin connected, the camera input alarm is triggered, and then camera will execute the action user has set, for example, send snapshot to E-mail address.

If you select "N.C" in "Input sensor setting", when external device or circuit makes DI and GND pin disconnected, the camera input alarm is triggered, and then camera will execute the action user has set, for example, send snapshot to E-mail address.

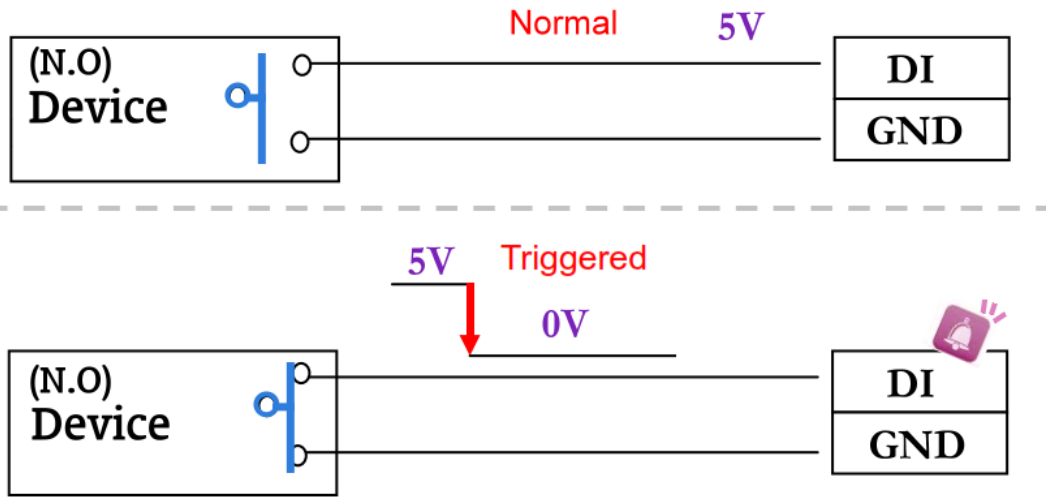

2. I/O Setup

a. Click I/O Setting from the system setup page via IE, and check “Out1” to enable I/O signal.

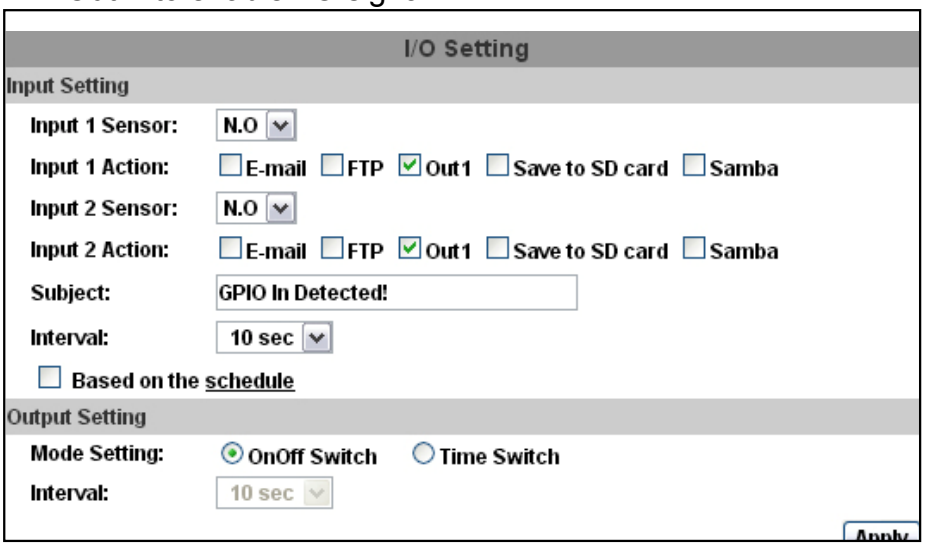

b. Output Test

After the external input and output hardware is installed, you can use the "Relay Out" bottom on the live video page to test if DO / Relay Out works.

(i) On Off Switch mode:

Click "ON", the camera will trigger the external output device for 10 seconds. For example, your alarm buzzer will continuously ring for 10 seconds. After 10 seconds the buzzer stops ringing, or you can manually break off the output signal by clicking "OFF".

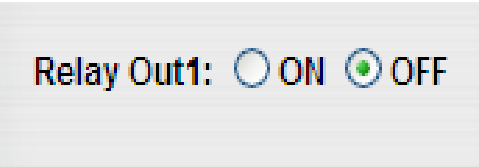

(ii) Time Switch mode:

Click "Pulse", the camera will trigger the external output device for several seconds; the duration length is according to the "interval" setting in Output Setting.

VII. Factory Default

- If the user name, password, and IP address are lost, please follow the following instructions.
- Unplug the power adapter first. Then, press the following button in the back of IP Camera.
- Plug the Ethernet. Do not release the button during the IP Camera booting.
- It will take around 30 seconds to boot the IP Camera.
- Release the button after the IP Camera finishes booting.
- Reconnect the IP Camera with the default IP address (http://192.168.1.200), user name (admin), and password (admin).

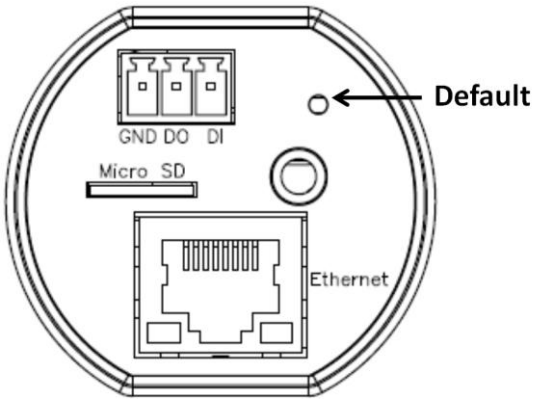

VIII. Universal Password

If you forgot the password of your IP camera, you can reset the camera to factory default, or follow the procedure below to generate a universal password.

Note: Universal password will be valid only when you enable the function in User Management.

1. First, you need to know the IP address and MAC of your IP camera. You can use IP installer to scan the LAN, and see the IP address and MAC on the side column.

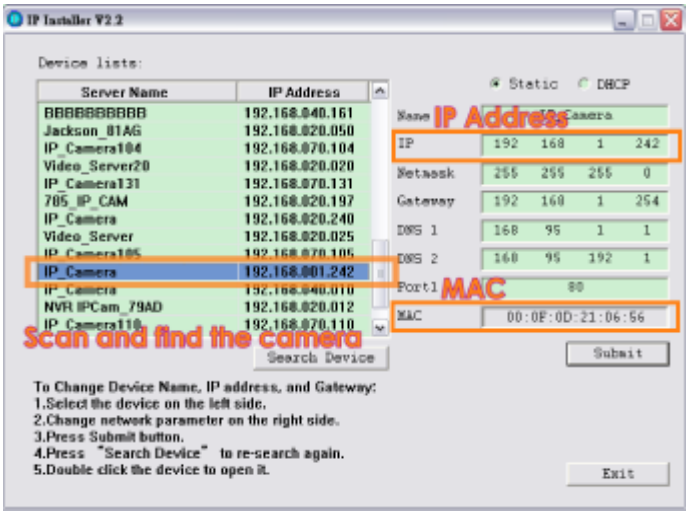

Or, if you already know the IP address of camera: Open the web browser, key in “http:// (IP address) /GetIPMAC.cgi” and press enter. The IP address and MAC will be displayed on browser.

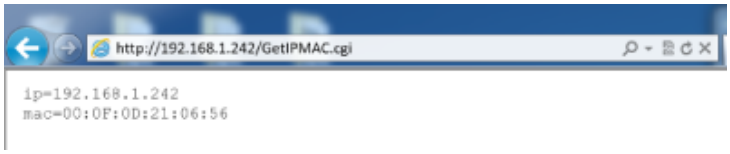

2. Find the .html file named “Universal Password” in CD-ROM. Click to open it.

3. Key in the camera IP address “IP Adder.” column and MAC in “MAC” column, and then click “encoder”. You will see a set of username and password appear, as below:

The universal username and password are generated from the IP address and MAC you key in, so if you change the camera IP address, the universal password changes, too.

4. Take the picture for example, the universal username is “C90848” and password is “CNCE_U6KLA”. Use them to log in the camera.

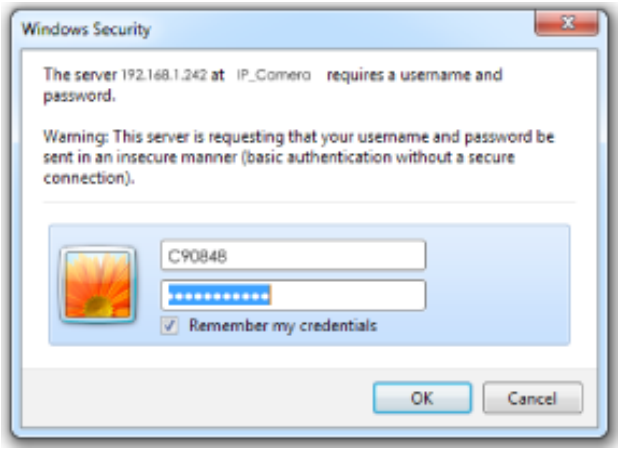
Windows Security
The server 192.168.1.242 at IP_Camera requires a username and password.
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).
C90848
Remember my credentials
OK
Cancel

5. Now you are logging in as administrator. Turn to User Management page. The use of universal password does not affect the previous user setting, so the administrator account password does not change until you edit it. Please click “Edit” to give a new administrator password.

IX. Package contents

IP Camera	Quick Installation Guide	CD
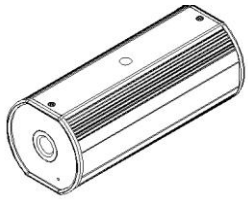		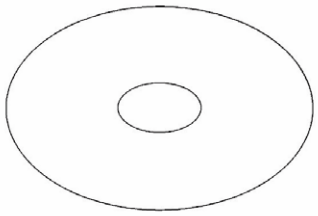
Mounting Bracket	Screws x3	Wall Plug x3
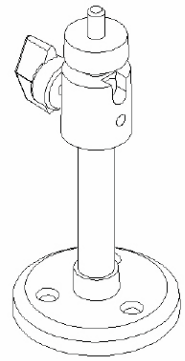	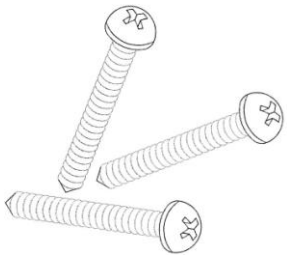	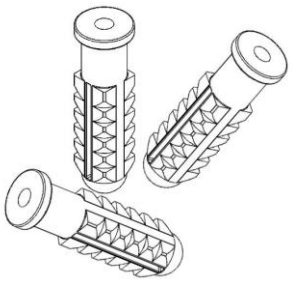

- The CD includes user manual and software tools

X. Micro SD Card Compatibility

The following is the Micro SD Card recommended:

Transcend	SDHC	class4	16GB
	SDHC	class4	32GB
	SD	class4	16GB
	SD	class4	32GB
	SDHC	class6	4GB
	SDHC	class6	8GB
	SDHC	class6	16GB
	SD	class6	4GB
	SD	class6	8GB
	SD	class6	16GB
SanDisk	SDHC	class4	4GB
	SDHC	class4	8GB
	SDHC	class4	16GB